


Rasland®

INSTALLATION GUIDE RA 956963LV

MANUAL RA 956963LV-2019-02

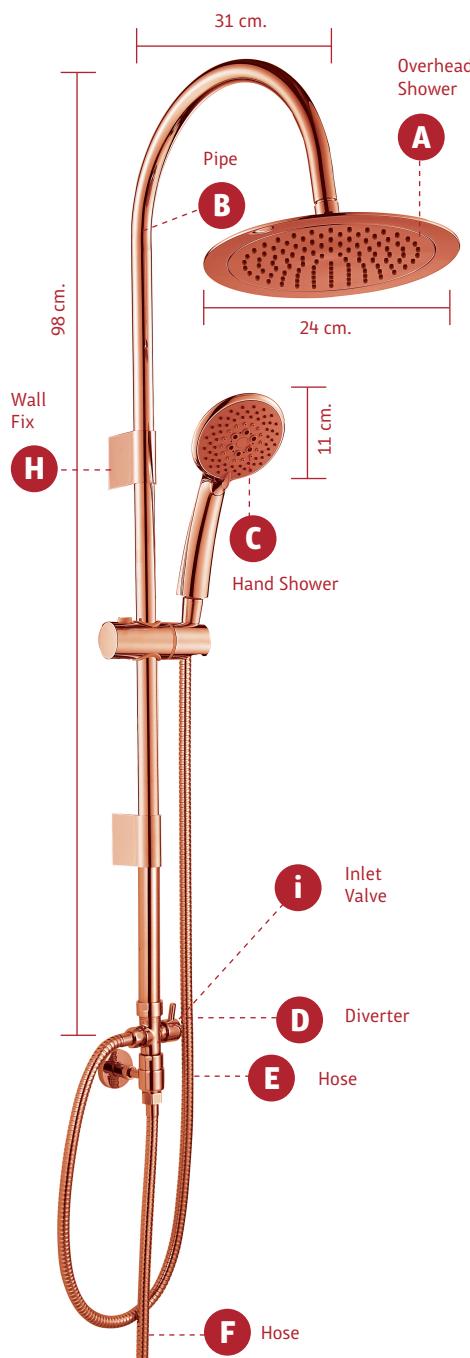

Run water through the in-wall-pipe before installing products

highly recommend for the new bathroom that has never been used before

1. Run water through the in-wall-pipe by opening the water valve and let water runs out from the pipe before installing any parts of products to the pipe. Please use any containers to block the water splash from the pipe during the run through. This process is highly recommended in order to wash out the deposit or any sands in the water pipe so that it will not cause damage to the products.
2. Run through process would take around 30 seconds by opening the valve all the way open so that the flow will bring out all the deposits out from the in-wall-pipe.
3. Close the main valve and then follow the installation guide below.

Installation guide

1. Measure the height at the position that the fixing (H) and (i) in order to drill holes on the wall.
2. Drill holes on the wall. (**Please be careful of the water pipe inside the wall that the screws are not supposed to cause any damage to the in-wall-pipe.**)
3. Put diverter to the end of the pipe by putting an o-ring in between. Then, screw the pipe to the wall.
4. Put the shower hose (E) by putting the shorter nut with the diverter and the longer nut with hand shower (C). Make sure that the o-ring is also put between the angle in order to prevent water leakage.
5. Hang the hand shower with sliding hook on the straight pipe.
6. Put the overhead shower(A) with pipe by putting an o-ring in between the angle to prevent water leakage.
7. Put the shower hose (F) by putting the shorter nut with the low-end of the pipe and the other end of the hose to outlet of the Water heater unit.
8. Turn on the water valve and enjoy the Shower Rain.

Clean guide and maintenance


1. Do not use acid chemical to clean the products because it will ruin the surface of the chrome plated.
2. Do not use rough surface material to rub or clean the product. Soft material is highly recommended.
3. Use dish washing chemical mix with some amount of water to shine the product.
4. In the case that the deposit blocks holes on the overhead shower or hand shower, the deposit can easily be removed by turning on the water and rub on the rubber head.
5. Do not adjust the height of the sliding hook by pulling the shower hose but use hold the button on the hook while sliding hook up and down.

Guarantee conditions

1. The warranty is only for the leakage of the water valve only (diverter). The period is counted from the date of purchase for 10 years.
2. The warranty is not effective if the leakage caused by mis-installing or deposit or lime that caused by water condition.
3. The company will be responsible the damage that is not exceed the price of the product and will not be responsible other things other than the product itself.
4. In order to claim the warranty, the sales receipt must be presented otherwise the company has the right to refuse the claim.

คู่มือการติดตั้ง RA 956963LV

MANUAL RA 956963LV-2019-02

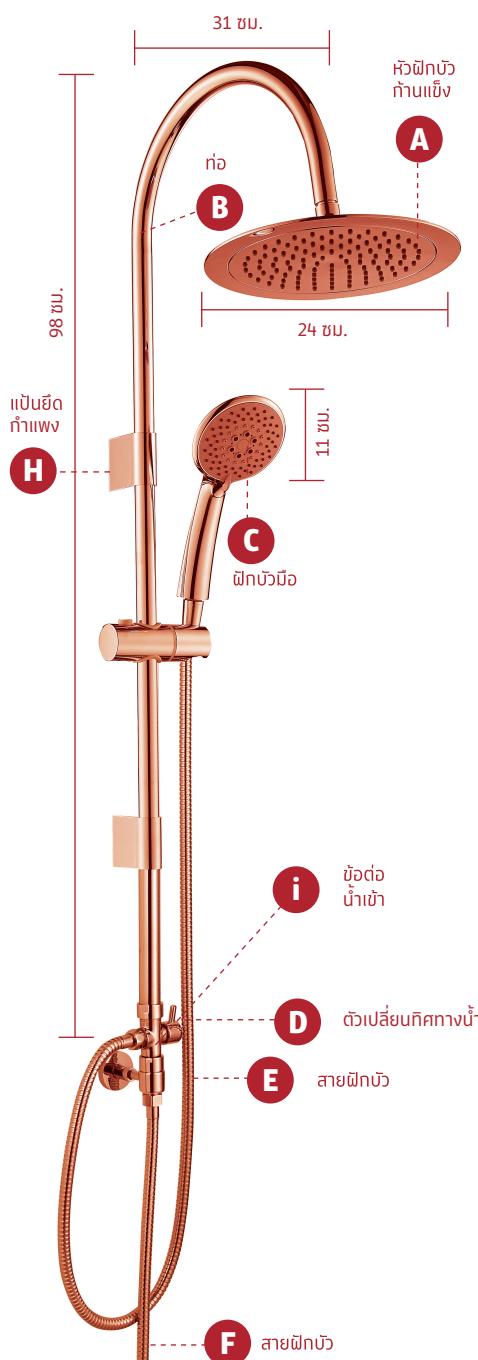

การໄລ້ນ້ຳກ່ອນກໍາກຳການຕິດຕັ້ງ

ແບະນ້ຳຍ່າງຍື່ງສໍາຮັບຮ້ອງນ້ຳໃໝ່ ກ່ຽວຂ້ອງໃຫຍ່ໃຊ້ຂ້ານ ມີຄວາມສົງເປົ້າໃໝ່

- ໄລ້ນ້ຳອອກຈາກກ່ອນກໍາພັງ ທີ່ໄດ້ຕົກຕັ້ງໃນການໃສ່ວາລົວ ເປີດປັດນ້ຳ ໂດຍການເປີດວາລົວນ້ຳຫຼັກ ໃນໜ້ອງນ້ຳໃຫຍ່ສຸດ ເພື່ອໃຫ້ຮູ່ໃຫຍ່ໄດ້ສິ່ງແປລກປລອບໃໝ່ໄກຫຼວກອອກຈາກກໍາພັງ ໂດຍໃຫ້ຕັ້ງນ້ຳ ມີຄວາມສຸດໃນການປັດກັນນ້ຳກໍາຮັດຕິນ ໂດຍໄປຕ້ອງໃສ່ວາລົວໃດໆ ທີ່ກໍາພັງ ເພື່ອເປັນການໄສ່ຜູ້ນະຈອນ ດະກັນ ດະກັນ ເຄືກຣາຍ ມີຄວາມສຸດໃນກໍາຫຼວກ
- ເປີດນ້ຳກໍ່ໃຫ້ປັບລາ 30 ວິນາກີ ເພື່ອຮອ່ວຍໃຫ້ນ້ຳພາສີ່ງແປລກປລອນຕ່າງໆທີ່ນາກັບກໍາພັງ ອຸດຕັ້ນເປົກບັງຮັບຮູ່ວາລົວນ້ຳ
- ປັດວາລົວຫຼັກໃນໜ້ອງນ້ຳ ແລະປະກອບສັບຄ້າດາມການຕິດຕັ້ງດ້ານລ່າງ

ວິธີການຕິດຕັ້ງສັບຄ້າ

- ໃສ່ປະເກີນຍາງຮະຫວ່າງຂ້ອດຕ່ວ ເພື່ອໄປໃຫ້ນ້ຳເຂົ້າ ແລະປະກອບຂ້ອດຕ່ວນ້ຳເຂົ້າເຫັນ
(i) ເຂົ້າກັບດ້ານລ່າງຂອງຕັ້ງຕົ້ນຢັ້ງຢືນກັບຕັ້ງຕົ້ນ
ໂດຍໃສ່ປະເກີນຍາງຮະຫວ່າງຂ້ອດຕ່ວເພື່ອໄປໃຫ້ນ້ຳເຂົ້າ
- ວັດຮັບຕັ້ງແລະກໍາເຄືອງຮັບມາຍໃນການເຈະຮູ່ກີພັນ ເພື່ອກຳກຳເຈະຮູ່ໃສ່ແປນຍືດກໍາພັງ (H) ແລະ (i)
ໂດຍວັດພຽນກັບກໍ່ສອງຈຸດ
- ເຈະຮູ່ກໍາພັງຕາມຮູ່ກໍ່ໃຫ້ປັບແປນຍືດ ໂດຍຕ້ອງຮັວງ !!!! ອ່ຍ່າໃຫ້ນັດ ຍັດ ກະຊຸກໍາພັງໄປໂດບກ່ອນນ້ຳ
ກ່ອນໄວ້ວ່າຍີໃກ່ພັກທີ່ຕົດຕ່າງ
- ໃສ່ຕົວໃປແປນຍືດແລະຄອບຕັ້ງຢັ້ງຢືນກັບຕັ້ງຕົ້ນ
5. ໃໃສ່ສາຍຟັກບັງ (E) ໂດຍໃຫ້ຂ້ອດຕ່ວດ້ານສັນ ກວ່າຂອງສາຍຟັກບັງ ຕ່ອກັບຕັ້ງເປົ້ນກັບຕັ້ງຕົ້ນ
ໂດຍໃຫ້ນັດຫຼັກ ຄວ່ວໃສ່ປະເກີນຍາງກັບນ້ຳເຂົ້າຕ້ວຍ ແລະດ້ານຍາວກວ່າຕ່ອກັບຟັກບັງນີ້ (C)
ໂດຍໃຫ້ນັດຫຼັກ ຄວ່ວໃສ່ປະເກີນຍາງກັບນ້ຳເຂົ້າ
6. ແຂວນຟັກບັງນີ້ເຂົ້າກັບຂອບຂອບແຂວນຟັກບັງໃຫ້ຮູ່ກໍ່ກ່ອລຍ່ແບບຕຽງ
7. ຢຸບຫຼັກຟັກບັງກໍາດັບແຂງ (A) ເຂົ້າກັບຂ້ອດຕ່ວຟັກບັງກ່ອລຍ່ ໂດຍໃສ່ປະເກີນກັບນ້ຳເຂົ້າ
ແລະໃຫ້ນັດຫຼັກໃຫ້ແປນ
8. ໃໃສ່ສາຍຟັກບັງ (F) ໂດຍໃຫ້ຂ້ອດຕ່ວດ້ານສັນກວ່າຂອງສາຍຟັກບັງ ຕ່ອກັບປລາຍດ້ານລ່າງສຸດຂອງຂ້ອດຕ່ວ
ໂດຍໃຫ້ນັດຫຼັກ ຄວ່ວໃສ່ປະເກີນຍາງກັບນ້ຳເຂົ້າຕ້ວຍ ແລະດ້ານຍາວກວ່າ ຕ່ອກັບຮູ່ນ້ຳອອກ
ຂອງຄົງກຳນັດນ້ຳອຸ່ນ (ສາຍຫາດຍາວ 120 ຊມ.)
- ເປີດວາລົວນ້ຳໃຊ້ຂ້ານໄດ້ດ້ານປົກຕົວ

ວິທີການກຳຄວາມສະຈາດ ແລະດູແລຮັກຫາ

- ໜ້າໃຫ້ນ້ຳຢ້າງຮ້ອງນ້ຳ ໃນການກຳຄວາມສະຈາດສັບຄ້າ ເພຣະຈະກຳໃຫ້ພົວຂອງສັບຄ້າເສີ່ຫາຍາ
- ໄປຄວ່ວໃຫ້ສັດພົວໜ້າກຳກຳການສະຈາດ ຕ້ອງໃຫ້ພົວນ້ຳເກີນນັນໃນການເຫັນກຳຄວາມສະຈາດ
- ໃຫ້ບ້າຍ້າຢ້າງຈານພສນ້າ ໃນການຢ້າງໃຫ້ຫຼັບເຈົ້າ
- ໝາກໃຫ້ຈານແລ້ວ ຮູ້ນ້ຳກັບຟັກບັງນີ້ ມີຄວາມສົງເປົ້າໃຫ້ນັດຫຼັກ ສາມາດໃຫ້ນັດຫຼັກຢູ່ບັນຫາ ໃນບໍລິຫານເປີດນ້ຳ
ເພື່ອໃຫ້ດັດກັນທີ່ອຸດອຸ່ນ ອຸດອອກຈາກຮູ່ກໍ່ກ່ອລຍ່
- ໄປຄວ່ວດັ່ງສາຍຟັກບັງໃນການປັບປຸງກຳກຳການສົງເປົ້າຂອງຂ້ອດຕ່ວ ເພຣະຈະກຳໃຫ້ສັບຄ້າເສີ່ຫາຍາໄດ້

ການຮັບປະກັນ

- ສັບຄ້າຮັບປະກັນເລົາກໍາພັງ ກ່ຽວຂ້ອງເປີດປັດນ້ຳ ໂດຍຮັບປະກັນນ້ຳໄປຮັ້ງສົມ ເປັນເວລາ 5 ປີ
- ການຮັບປະກັນ ໄປຮັບປະກັນໃນກຮົມທີ່ກໍາກຳກຳການສົງເປົ້າ ກ່ຽວຂ້ອງສິ່ງແປລກປລອນອຸດຕັ້ນກາຍໃນ ມີຄວາມສົງເປົ້າໃຫຍ່ສຸດ
ໃສ່ນັດຫຼັກ ມີຄວາມສົງເປົ້າໃຫຍ່ສຸດໃນກໍາຫຼວກ
- ການຮັບປະກັນ ກາງບຣັຊັກ ຈົບພົດຂອງໄປ່ເກີນບຸລຸກໍາຂ່າຍສັບຄ້າ ໂດຍໄປຮັບພົດຂອບ
ຄວາມເສີ່ຫາຍາວັນ ນັດແນ້ວຈາກຕັ້ງສັບຄ້າ
- ໃນການຄົມສັບຄ້າ ຕ້ອງແສດງໃບເສົງ ໃນການສັງເປົ້າສຳຄັນ ພັຈະນັນກາງບຣັຊັກ
ສ່ວນສຶກສຶກໃນການໄມ່ເຄົມສັບຄ້າ