


## คู่มือการติดตั้ง RA ALL-BLACK

MANUAL RA ALL-BLACK-2022-02

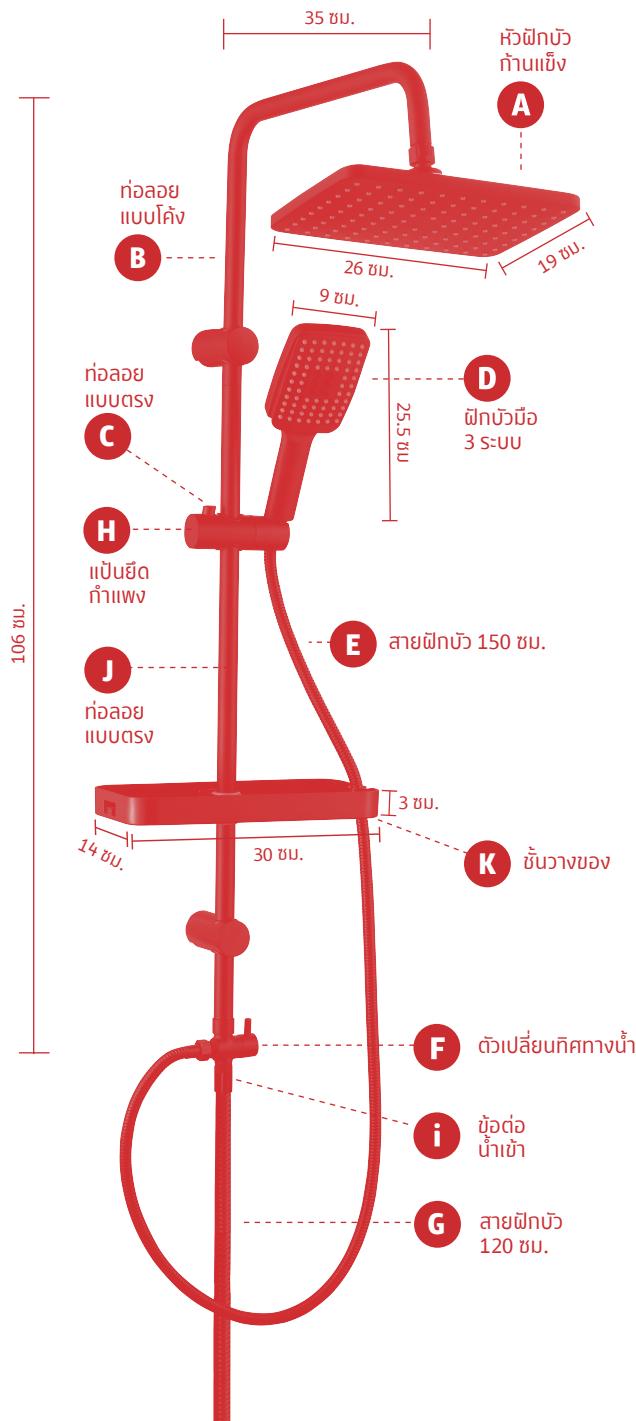

### การໄລ່ນ້ຳກ່ອນກໍາການຕິດຕັ້ງ

ແບບນ້ຳຍ່າງຊື່ສໍາເຫັນຮ້ອງນ້ຳໃໝ່ ທີ່ຢັ້ງໄມ່ເຄຍໃໝ່ຈານ ແຮ້ໃນກຣນີເປົ່າຍັນສັນຄ້າໃໝ່

- ໄລ່ນ້ຳອອກຈາກກ່ອນກໍາພັງ ຖ້າໄດ້ເຕີເຕີຍບີໄວ້ໃນການໃສ່ວາລົງ ເປີດປົດນ້ຳ ໂດຍການເປີດວາລົງນ້ຳຫລັກ ໃນຮ້ອງນ້ຳໃໝ່ສຸດ ເພື່ອໃຊ້ຮ້ອງນ້ຳໄລ່ສົ່ງແປລກປລອນໃຫ້ໄຂລວອກຈາກກໍາພັງ ໂດຍໃຊ້ດົນນ້ຳ ມີວິສະດຖານຸໃນກຣນີ ໂດຍໄມ່ຕົ້ນໃຈ່ວ່າລົງໄດ້ຕົ້ນ ດະກຽນ ດະກອນ ເສຍກາຍ ມີວິສະດຖານຸໃນກຣນີ ເພື່ອເສຍກັນທີ່ກໍາຈອງຢູ່ໃນກ່ອວອກ
- ເປີດນ້ຳທີ່ຈະໄວ້ເປັນເວລາ 30 ວັນາຖີ ເພື່ອຮອໃຫ້ນ້ຳພາສີ່ງແປລກປລອນ ໄກສອກນາຈາກກໍາໃໝ່ຫຼັມດ ກ້ານນີ້ເພື່ອໄປເຫັນ ສົ່ງແປລກປລອນຕ່າງໆທີ່ນາກັບກໍານົດ ອຸດຕັນຝັກບັງຫຼືວາລົງນ້ຳ
- ປັດວາລົງຫລັກໃນຮ້ອງນ້ຳ ແລະ ປະກອບສັນຄ້າຕາມກໍາຕິດຕັ້ງດ້ານລ່າງ

### ວິທີກໍາຕິດຕັ້ງສັນຄ້າ

- ປະກອບກໍ່ວລອຍແບບຕຽບ (J) ເຫັນຕັບຕົວເປົ່າຍັນກີກຄາກນ້ຳ (F) ໂດຍໃສ່ປະເກີນຍາງຮ່າງຂ້ອດຕ່ວ ເພື່ອໄປໃຫ້ນ້ຳສົນ ແລະ ປະກອບຂ້ອດຕ່ວນ້ຳເຫັນ (i) ເຫັນຕັບດ້ານລ່າງຂອງຕັວເປົ່າຍັນກີກຄາກນ້ຳ ໂດຍໃສ່ປະເກີນຍາງຮ່າງຂ້ອດຕ່ວເພື່ອໄປໃຫ້ນ້ຳສົນ
- ໃສ່ຂອງແຂວ່ານ້ຳກັບກໍ່ວລອຍໂດຍກົດປຸ່ມລົ້ອຄຂອງແຂວ່ານ້ຳໃໝ່
- ວັດຮະຕັບແລະ ກໍາເຄີ່ງຮ່າຍໃນການຈະຈຽງຮູ່ກີກພົງ ເພື່ອກໍາການຈະຈຽງໃສ່ແປັນຫັດກໍາພັງ (H) ແລະ (i) ໂດຍວິພວ່ອຮັບກັບທັງລົງຈຸດ
- ຈະຈຽງກໍາພັງຕາມຮຽກຮູ່ກີກໃໝ່ໄປແປັນຫັດ ໂດຍຕ້ອງຮັວງ !!! ອ່າຍ້າໃຫ້ນົດຕ່ອງ ຢັດ ກະລຸກໍາພັງໄປໂດນກ່ອນນ້ຳ ກໍ່ເດີນໄວ້ກໍາພັງໃນກໍາພັງຕົ້ນດໍານັກ
- ໃສ່ຂັ້ນວາງຂອງ(K) ເຫັນໄປໃນກໍ່ວລອຍ(J) ໃຊ້ວັງແປັນຫັດແລະ ຄອບຕັວຢັດກໍາພັງ ເຫັນຕັບກໍ່ວລອຍແບບຕຽບ
- ໃສ່ກໍ່ວລອຍແບບຕຽບ (B) ລົງໄປໃນກໍ່ວລອຍແບບຕຽບ ໂດຍປ່ອລ່ອຍເກສຍຕັວລົ້ອຄ (C) ໃຫ້ຮອນນ໌້າສຸດ ໃນຂະນະໃສ່ກ່ອນໂຄງລົງໄປໃບກ່ອນ
- ບັນນິດຕັບກໍານົດຕັບກໍາກ່ອນກໍ່ເປັນ (C)
- ໃສ່ສາຍຝັກບັງ (E) ໂດຍໃຊ້ຂ້ອດຕ່ວດ້ານສັນ ກ່າວຂອງສາຍຝັກບັງ ຕ່ອກັບຕົວເປົ່າຍັນກີກຄາກນ້ຳ ໂດຍໃຊ້ນ້ຳຂົບມຸນ ຜວນໃສ່ປະເກີນຍາງກັບນ້ຳສົນ ແລະ ດ້ວຍກໍານົດຕັບສົນ (ສາຍຝັກບັງ 150 ຊມ.)
- ແຂວ່ານ້ຳສົນເຫັນເຫັນຕັບຂອງແຂວ່ານ້ຳສົນ (G) ໂດຍໃຊ້ຂ້ອດຕ່ວດ້ານສັນກ່າວຂອງສາຍຝັກບັງ ຕ່ອກັບປລາຍດ້ານລ່າງສຸດຂອງຂ້ອດຕ່ວ ໂດຍໃຊ້ນ້ຳຂົບມຸນ ຜວນໃສ່ປະເກີນຍາງກັບນ້ຳສົນ ແລະ ດ້ວຍກໍານົດຕັບສົນ (ສາຍຝັກບັງ 120 ຊມ.)
- ເປີດວາລົງນ້ຳໃໝ່ຈານໄດ້ຕາມປົກຕົວ

### ວິທີກໍາກຳຄວາມສະຈາດ ແລະ ຕຸດແຮກຫາ


- ກ້າວໃຫ້ນ້ຳຍ້າລ້າງຮ້ອງນ້ຳ ໃນການກໍາກຳຄວາມສະຈາດສັນຄ້າ ເພະຈະກໍາໃຫ້ຜົວຂອງສັນຄ້າເສຍໝາຍ
- ໄມ່ຄວນໄວ້ສຸດພົວໝາຍບັນດາກໍາກຳຄວາມສະຈາດ ຕ້ອງໃຫ້ຜົວນ້ຳເກົ່ານັນໃນການເຂັດກໍາກຳຄວາມສະຈາດ
- ໃຫ້ນ້ຳຍ້າລ້າງຈານພສນຳ ໃນການລ້າງໃຫ້ຜົວນ້ຳ
- ກາຍໃຊ້ຈານເລັ້ວ ຮູ່ນ້ຳທີ່ຝັກບັງນີ້ ມີອັນດີກັບກໍານົດຕັບສົນ ສາມາດໃຫ້ບັນດູບຸ່ນຍາງ ໃນຂະນະເປີດນ້ຳ ເພື່ອໃຫ້ດົນດໍານັກທີ່ອຸດວູ່ ລຸດວອກຈາກຮູ່ກີກພົງ
- ໄມ່ຄວນດັ່ງສາຍຝັກບັງໃນການປັບປຸງຕັບຄວາມສູງຂອງຂອງແຂວ່ານ້ຳ ເພະຈະກໍາໃຫ້ສັນຄ້າເສຍໝາຍໄດ້

### ການຮັບປະກັນ

- ສັນຄ້າຮັບປະກັນເອພະນ້ຳວ່າໜີ້ສົນ ຖ້າລົງເປີດ ປັດນ້ຳ ເກົ່ານັນ ໂດຍຮັບປະກັນນ້ຳໄປວ່າສົນ
- ການຮັບປະກັນ ໄມ່ຮັບປະກັນໃນກຣນີທີ່ກໍາກຳຄວາມສະຈາດ ຕ້ອງໃຫ້ຜົວນ້ຳເກົ່ານັນ ໂດຍເປົ່າຍັນກໍາຕິດຕັ້ງຜົດວິຊີ ວັນທີເປົ່າຍັນກໍາຕິດຕັ້ງ
- ການຮັບປະກັນ ກາງບັນດາ ຈະຮັບຜົດຂອບໄມ່ເກີນມຸລືຄ່າຂອງສັນຄ້າ ໂດຍໄມ່ຮັບຜົດຂອບຄວາມສູ່ເສຍໝາຍເວັ້ນ ນອກເໜືອຈາກຕັວສັນຄ້າ
- ໃນການເຄີຍສັນຄ້າ ຕ້ອງແສດງໃນເສົ່າ ໃນການຊັ້ນເປັນສຳຄັນ ມັຈະບັນກາງບັນດາ ສ່ວນສັກຮີໃນການໄປເຄີຍສັນຄ້າ

## INSTALLATION GUIDE RA ALL-BLACK

MANUAL RA ALL-BLACK-2022-02

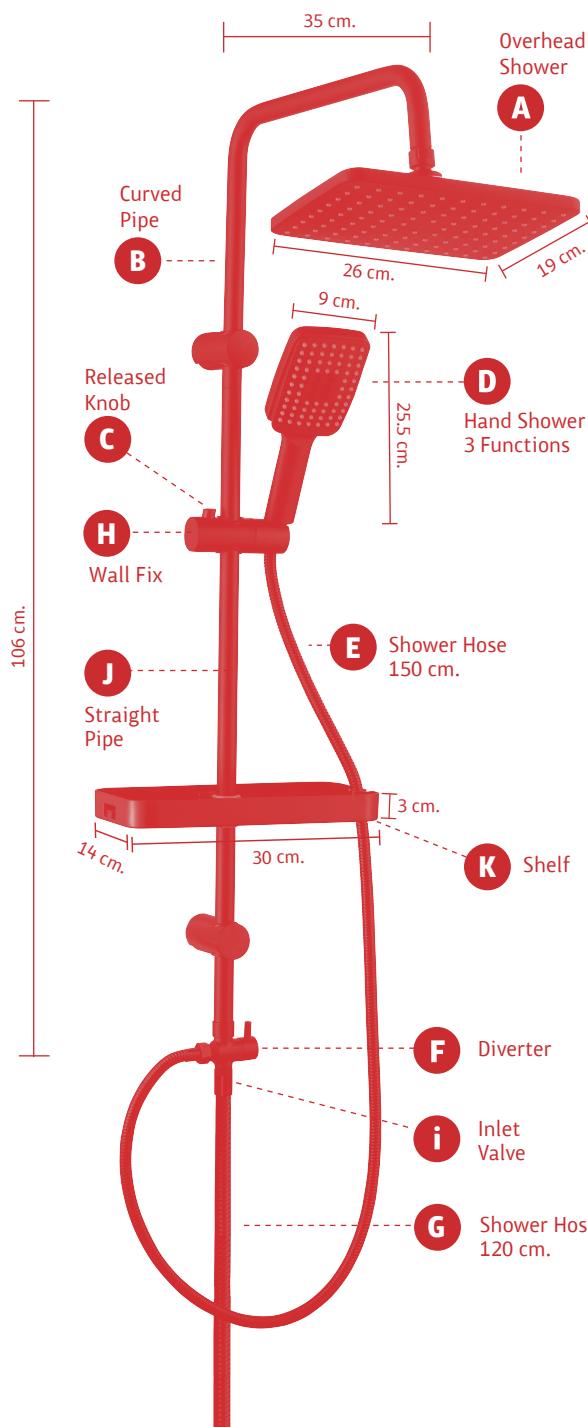

### Run water through the in-wall-pipe before installing products

highly recommend for the new bathroom that has never been used before

1. Run water through the in-wall-pipe by opening the water valve and let water runs out from the pipe before installing any parts of products to the pipe. Please use any containers to block the water splash from the pipe during the run through. This process is highly recommended in order to wash out the deposit or any sands in the water pipe so that it will not cause damage to the products.
2. Run through process would take around 30 seconds by opening the valve all the way open so that the flow will bring out all the deposits out from the in-wall-pipe.
3. Close the main valve and then follow the installation guide below.

### Installation guide

1. Install straight pipe (J) to the upper side angle of the diverter (F) by putting an o-ring between the angle to prevent water leakage and put the inlet valve (i) to the lower side angle of the diverter.
2. Measure the height at the position that the fixing (H) and (i) in order to drill holes on the wall.
3. Drill holes on the wall. (**Please be careful of the water pipe inside the wall that the screws are not supposed to cause any damage to the in-wall-pipe.**)
4. Screw to fix the fixing set
5. Put the shelf(K) into the straight pipe(J). Put the curved pipe(B) into the straight pipe while putting the pipe the released knob (B) must be turned until the very loose end. The users can indicate by himself.
6. Turn the released knob to make sure that the curved pipe is already fixed and tight at the satisfied height.
7. Put the shower hose (E) by putting the shorter nut with the diverter and the longer nut with hand shower (D) . Make sure that the o-ring is also put between the angle in order to prevent water leakage.
8. Hang the hand shower with sliding hook on the straight pipe.
9. Put the overhead shower(A) with the curved pipe by putting an o-ring in between the angle to prevent water leakage.
10. Put the shower hose (G) by putting the shorter nut with the low-end of the pipe and the other end of the hose to outlet of the Water heater unit.
11. Turn on the water valve and enjoy the Shower Rain.

### Clean guide and maintenance

1. Do not use acid chemical to clean the products because it will ruin the surface of the chrome plated.
2. Do not use rough surface material to rub or clean the product. Soft material is highly recommended.
3. Use dish washing chemical mix with some amount of water to shine the product.
4. In the case that the deposit blocks holes on the overhead shower or hand shower, the deposit can easily be removed by turning on the water and rub on the rubber head.
5. Do not adjust the height of the sliding hook by pulling the shower hose but use hold the button on the hook while sliding hook up and down.

### Guarantee conditions

1. The warranty is only for the leakage of the water valve only (diverter). The period is counted from the date of purchase for 10 years.
2. The warranty is not effective if the leakage caused by mis-installing or deposit or lime that caused by water condition.
3. The company will be responsible the damage that is not exceed the price of the product and will not be responsible other things other than the product itself.
4. In order to claim the warranty, the sales receipt must be presented otherwise the company has the right to refuse the claim.