


※Installation Instructions

☆ Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.


☆ To avoid the faucet from jamming, do flush the water pipe before installation.

☆ After installation, make sure every joint safely sealed & no leaking.



☆ Using condition: working pressure at 0.05-1.0MPa(including cold&hot water pressure) with applicable water temperature:4 °C-90 °C.


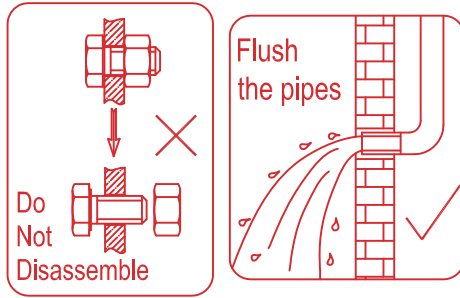


※Dimensions

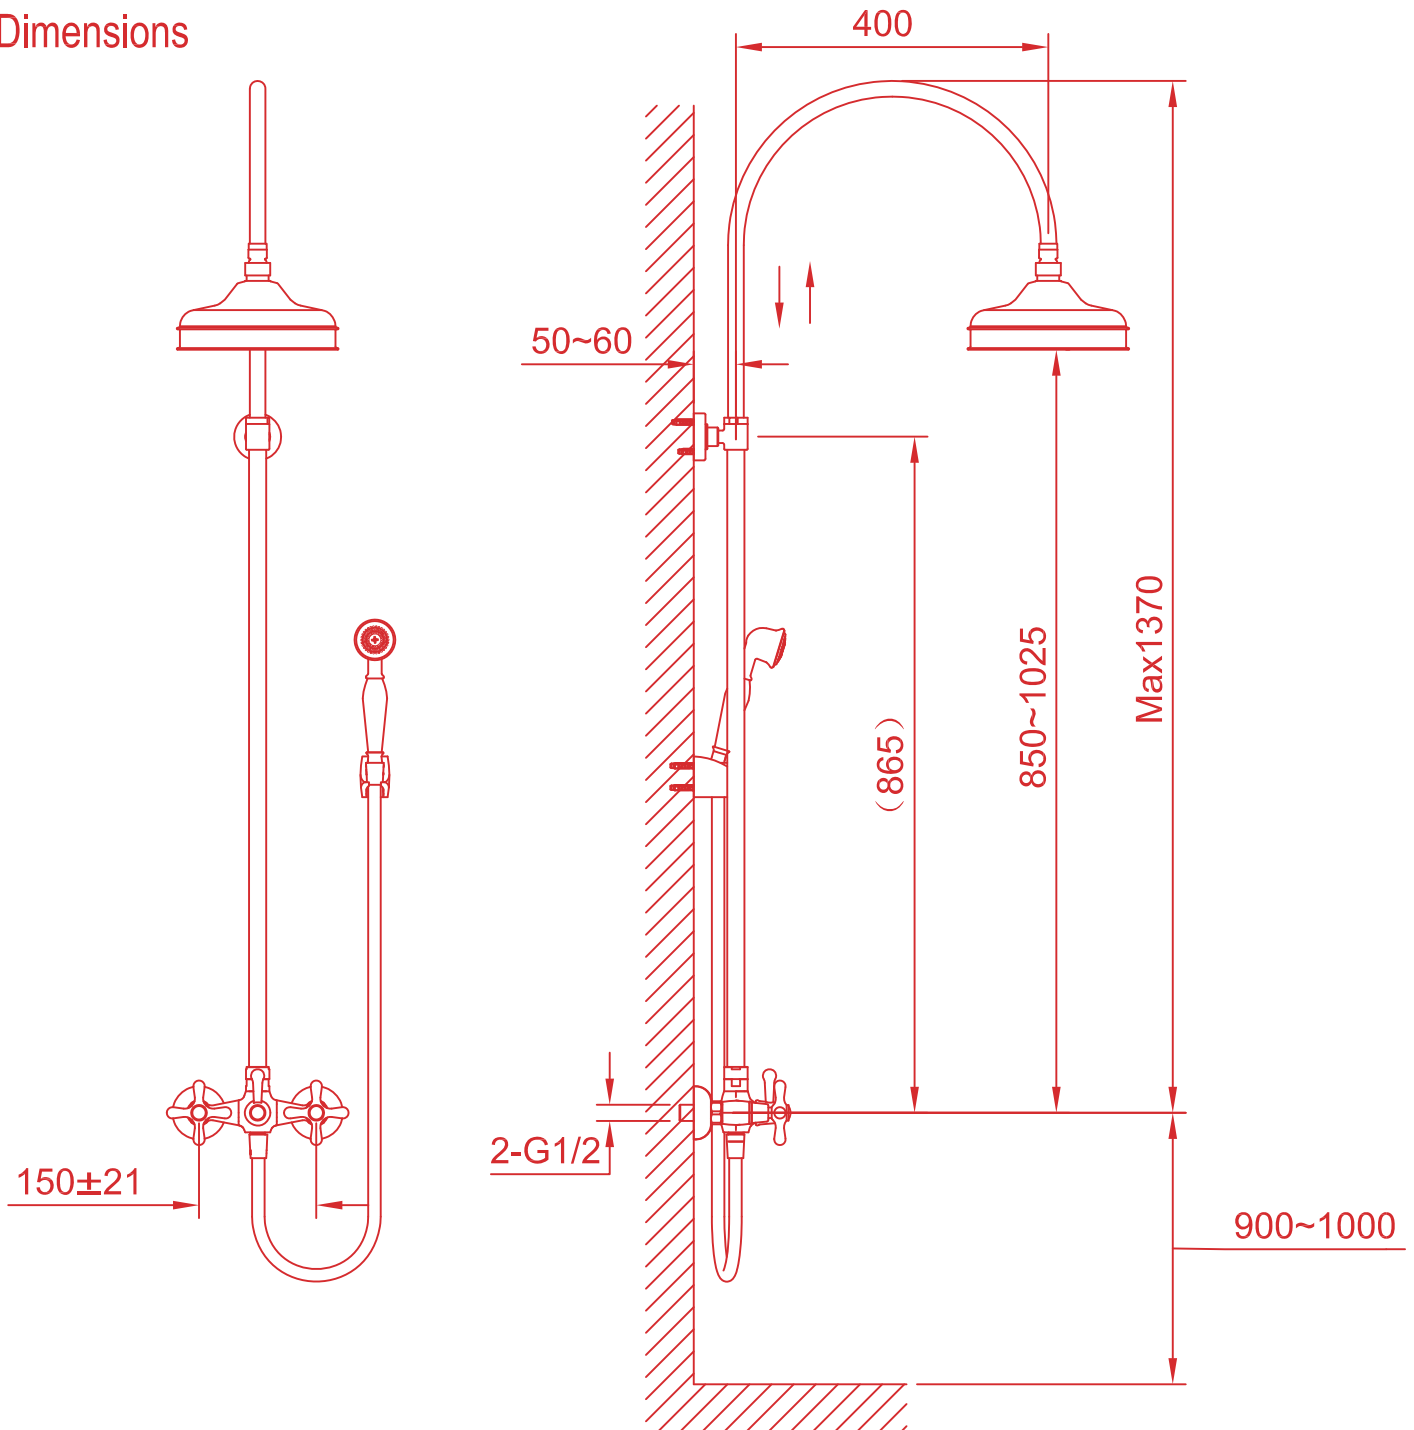


※Installation Procedures
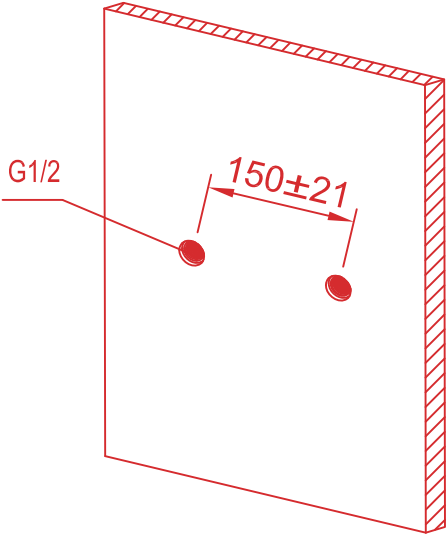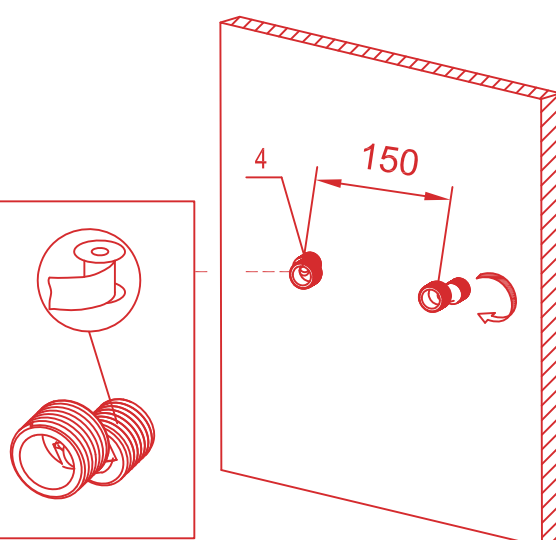
| | |
|---|--|
| <p>1.</p>  | <p>2.</p>  |
| <p>1. Conceal the supply pipes and connectors to the wall before installation.</p> | <p>2. Wrap the seal tape onto the G1/2 thread of eccentrics(4), screw to the wall, and adjust the 2 eccentrics to the same height.</p> |

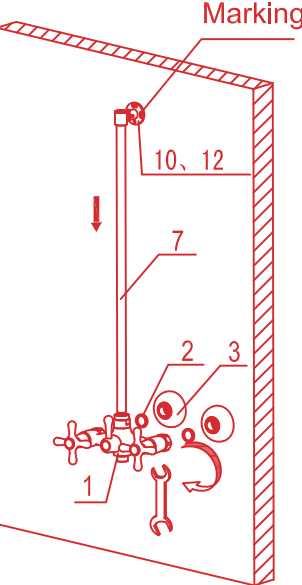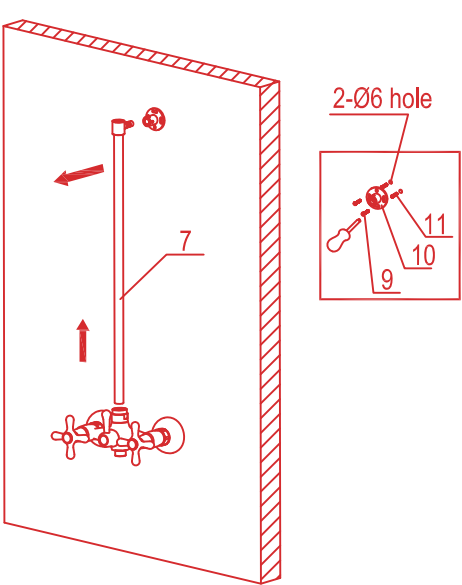
| | |
|---|---|
| <p>3.</p>  | <p>4.</p>  |
| <p>3. Put the decorative cover 1(3) to the eccentric, then washer(2) and main body(1), screw up nut of mainbody to the eccentric, and fasten with spanner. Install the medium-section pipe(7), installation seat(10) and screw(12) in turn. Make the marking on the wall in order to drill holes for installation seat.</p> | <p>4. Disassemble the medium-section pipe(7) from the main body, loose the screw(12) and take out the installation seat. Drill 2 holes with $\phi 6$ in the place marked, put inside holes the explosive plug(11), then put the self-tapping screw(9) to the plug through the installation seat, but do not tighten.</p> |

5.

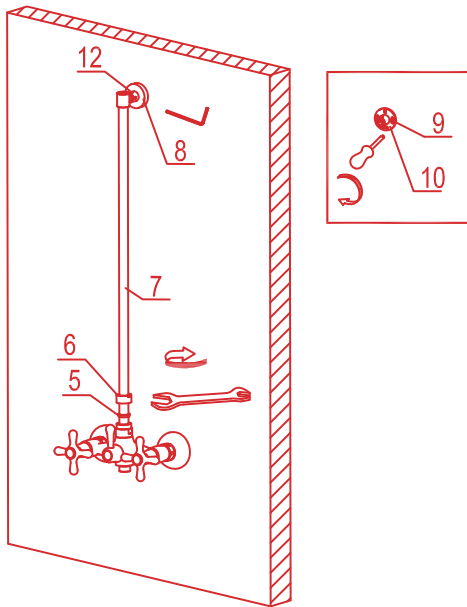


5. First cover the installation seat with the decorative cover 2 (8), then, insert the Medium-section pipe (7) into Cone o'ring (5) and Nut 1 (6), assemble with Main body & installation seat. After adjust position properly, use screw-driver to tighten the Self-tapping screw (9). Adjust decorative cover 2 to the wall at the same level by hand. Then, use allen key to fasten Medium-section pipe through Screw (12). At last, use spanner to fasten Nut 1 on Medium-section pipe;

6.

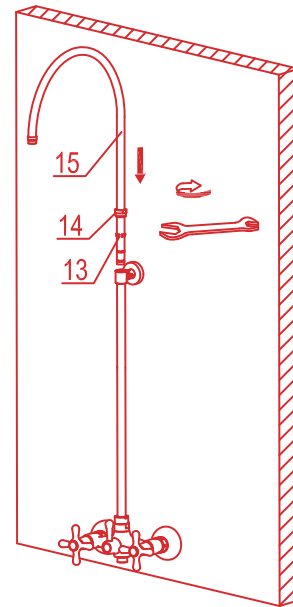


6. Shower pipe (15) Insert into Medium-section pipe (7), After adjusting the required height (not more than the highest height), using spanner to fasten the Nut 2 (14). Make sure shower pipe (15) is installed tightly and sealed good.

7.

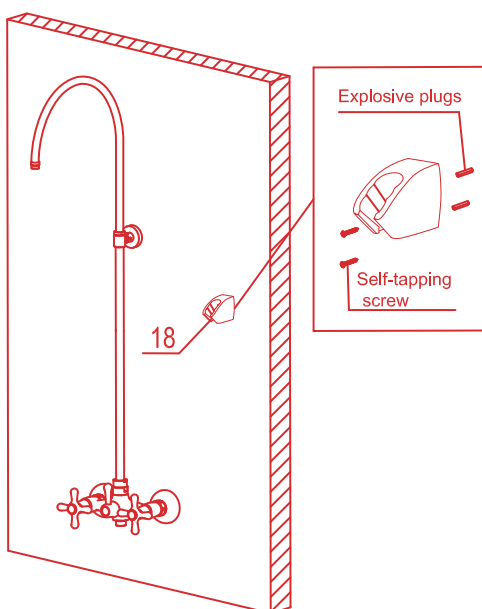

7. With utilizing location of shower hook (18), to drill hole of 2-Ø6 on the wall properly. To fasten Shower hook on the wall of reserve location with utilizing the self-tapping screw & explosive plugs in the Shower hook.

8.

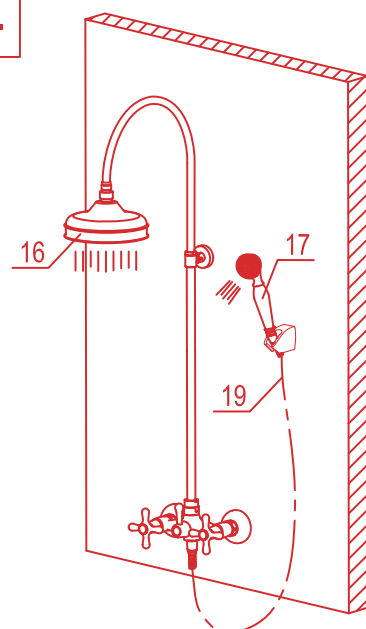


8. After ensuring the installation firmly for main body, medium-section pipe, shower pipe & shower hook, screw the rain shower on shower hose set by hand, then, connect main body and hand shower by using shower hose (19). At last, turn on the water and test connection site's tightness nature. If it is OK, that means installation completely.

※Usage


☆ How to operate the handle:

- 1) Left handle control the hot water, right handle for cold water.
- 2) Turn the handle lever to the left to increase hot water flow to higher water temperature, and lower the water temperature by operating reversely;
- 3) The usage of the right handle are reversely with the left one.

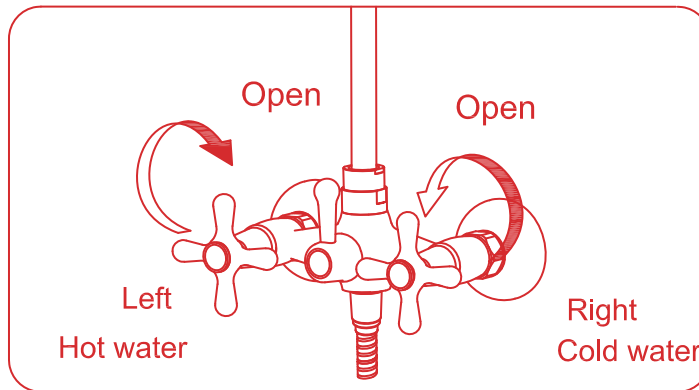

☆ Usage for the diverter handle:

- 1) Turn the diverter handle anti-clockwise to left, water comes from spout;
- 2) Turn the diverter handle clockwise to right, water comes from handshower.

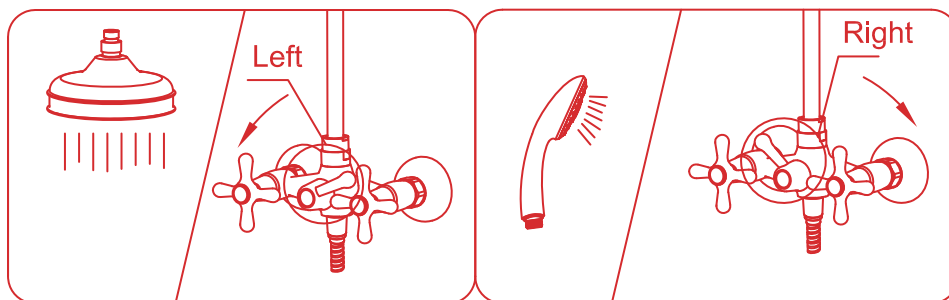

※Cleaning & Maintenance

☆ To keep the product clean & shining, follow the steps as below:

1. Flush with clean water & dry with soft cloth only;
2. If any dirt, clean with soft liquid or transparent glass detergent.
3. Do not use any scrubbing detergent, polisher, sand-cloth, paper tissue or scraper.
4. Do not use acid detergent, indissolvable grain-like detergent or soap.



※This installation instruction is only for your reference,
the final right to explain & to revise it belongs to us.

Serial number: 80010112263